



BEDIENUNGSANLEITUNG


BAUREIHE 21-E



Anwendungsbeispiel Innenausziehen mit Gleithammer




Kombination von Gleithammer und Innenauszieher mit Segmentspannung, Serie 21-E

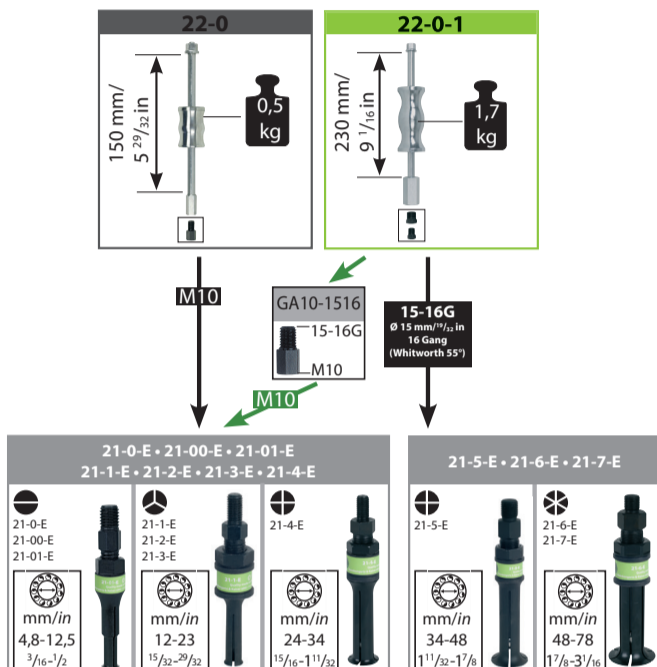


Anwendungsbeispiel Innenausziehen mit Gegenstütze



Kombination von Gegenstütze und Innenauszieher mit Segmentspannung, Serie 21-E

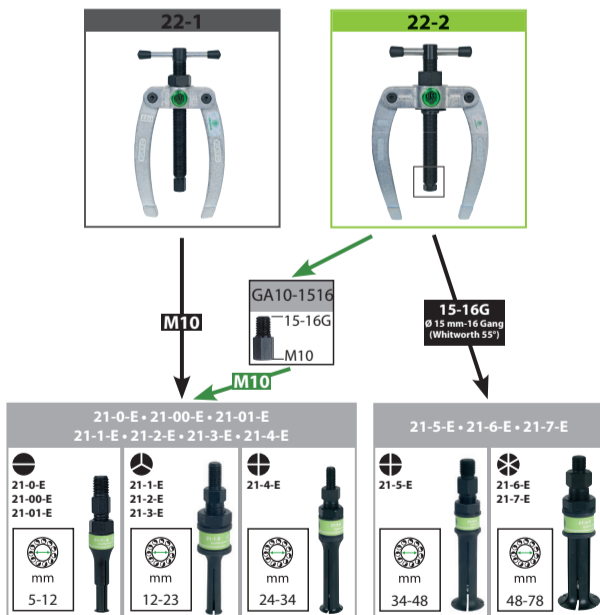

Sicherheits- und Gebrauchshinweise

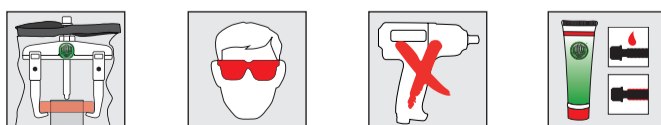

KUKKO-Werkzeugfabrik Kleinbongartz & Kaiser oHG
Heinrich-Hertz-Str. 5 • 40721 Hilden • GERMANY
Phone: +49 2103 9754-300 • Fax: +49 2103 9754-310
Für Bestellungen: order@KUKKO.com • www.KUKKO.com



BA-21-E-0516





INSTRUCTION MANUAL


SERIES 21



Example of application with slide hammer




Combination of slide hammer with segmented internal extractors, series 21-E

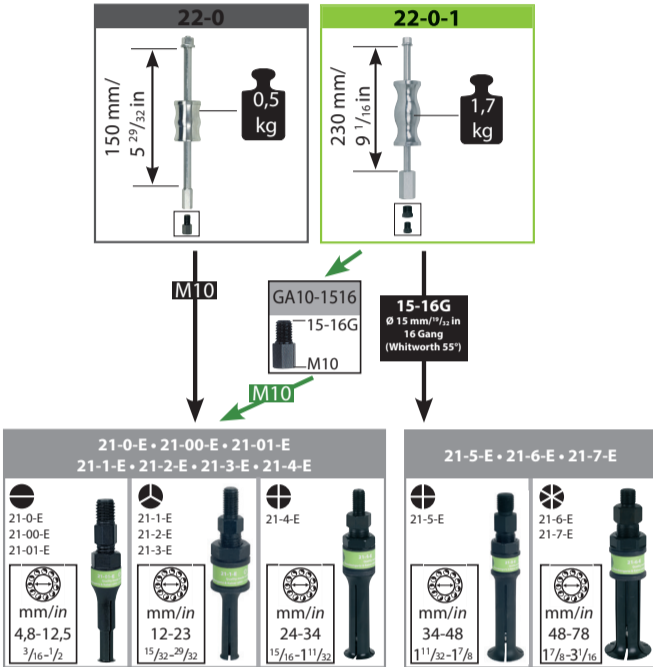


Example of application with counter stay



Combination of counter stay with segmented internal extractors, series 21-E

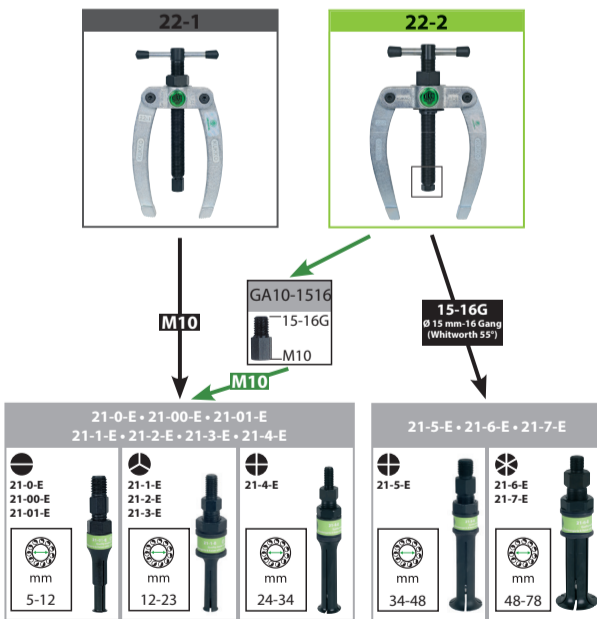

Safety instructions

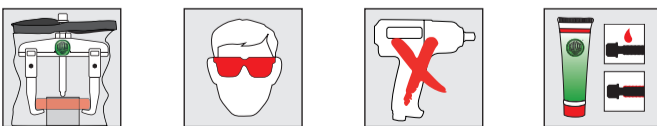

KUKKO-Werkzeugfabrik Kleinbongartz & Kaiser oHG
 Heinrich-Hertz-Str. 5 · 40721 Hilden · GERMANY
 Phone: +49 2103 9754-300 · Fax: +49 2103 9754-310
 For orders: order@KUKKO.com · www.KUKKO.com



BA-21-E-0516

